

Electric heater



Protected operating conditions

1 Application

Heating of instrument enclosures in hazardous areas, designed for

- freeze protection
- condensation protection
- temperature maintenance
- vertical installation

2 Special Features & Advantages

- availability of standard items from stock
- short delivery times
- vertical design allows for optimum installation adjacent to the instruments to be heated in the enclosure
- freeze-protection thermostat integrated as standard in the connection cable
- high heat output resulting from a special, black anodized aluminium profile construction

3 Description

The very versatile MEGATHERM line consists of electric heaters designed to heat the air in the enclosure by convection.

Wherever possible, a heater designed for temperature class T3 should be selected. A temperature limiter is integrated in the heater that cuts off the power in case of a technical failure or excessive heating resulting from an external heat source. It should be noted that the temperature limiter must only be repaired in our factory. For reasons of operational safety the heater must only be operated under conditions that ensure that the trip temperature of the limiter will not be exceeded:

- Ensure effective convection by observing the necessary clearances. Allow for good convection circulation in the enclosure and take care not to cover the fins.
- The TS thermostat supplied as standard will limit the ambient temperature in the housing.
- For temperature maintenance an additional external thermostat type TAE must be connected in series with the heater. It should be mounted on top of the heater surface to ensure thermal feedback.

• Alternatively a TC temperature controller can be used.

With regard to the residual current devices and insulation monitors, attention must be paid to DIN EN 60079-14 2008, Section 7.4 and/or the operating instructions.

A temperature indicator shows potential problems and failures at an early stage (e.g. incorrect installation). Please check the application if more than 3 fields have irreversibly changed to black.



- All INTERTEC explosion-proof heaters can also be supplied • to northamerican standard (CSA/ NEC/ NRTL/ FM/ UL).
- Ordering Example: CP MEGATHERM <u>CPA 200 T4</u>
 in a less expensive, <u>N</u>on-explosion-proof design
- Ordering Example: CP MEGATHERM <u>NPA 200</u> as Bi-Standard (see datasheet HD508)
- as Bi-Standard (see datasheet HD508)



4 Explosion Protection

EC Examination Certificate		PTB 02 ATEX 1041 X		
IEC Scheme Certificate		IECEx PTB 07.0052X		
Marking	II 2 G Ex dm IIC T3,T4,T5,T6			
Marking	II 2 D Ex tDmD A21 IP65 T135°C, T200° C			

5 Technnical Data

Ingress Protection	IP 68		
Nominal voltage	230V AC (220-240V AC)		
Operating temp. range	-50 to 180°C		
Connection cable	silicone cable, notch and oil resistant, 3x1,5 mm ² Ø8,5 mm		
Length of connect. cable	1 m		
Dimensions, (W x D)	229 x 60 mm		
Material seawater-p	seawater-proof aluminium, black anodized		

	DPA			DTA	
CP MEGATHERM	200	300*	400	300	600
Temperature class	T4	Т3	Т3	T4	Т3
Nominal power [W]	200	300	400	300	600
Height	225 mm		ו	325 mm	

*This type of heater is also available with a protective thermostat TS40 integrated in the connection cable for temperature maintenance up to 40°C. Room temperature control must be effected by an additional TAE thermostat or TC temperature controller. (Other types upon request)

6 Options

TS40 (to *)	Protective thermostat	
	Failure alarm opening at < 5 °C	
AM	silicone cable, notch and oil resistant	
	5x1,0 mm ² Ø8,8 mm	
3M	Connection cable 3 m long	
120 V	Nominal voltage 120 V, 24 V AC/ DC	
250V	Nominal voltage 250V AC (245-265 V AC)	
Not all options can be combined.		

Ordering example:

CP MEGATHERM DTA 600 T3 3M



CP MEGATHERM D.A

Electric heater




Installation, Minimum Clearances 7

During installation, attention should be paid to the following:


- installation and operating instructions supplied with the heater MEGATHERM
- The fins must be positioned vertically
- Please note minimum clearances to the enclosure, as per 7.1.1 and 7.1.2
- For temperature maintenance install the TAE thermostat on the heater, see 7.2
- The cable must be clearly legible .

Bolts and nuts are included in the mounting kit.


7.1 **MEGATHERM** with TS

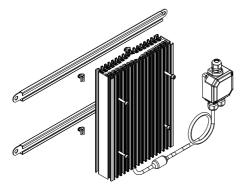


7.1.1 with customer-supplied internal junction box

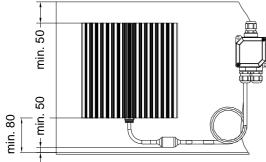

7.1.2 with customer-supplied external junction box

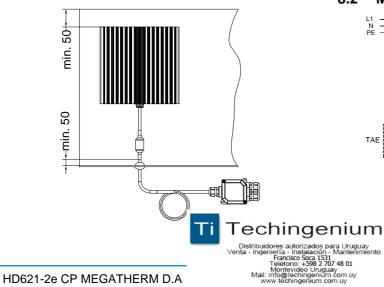


7.2 **MEGATHERM** with TAE

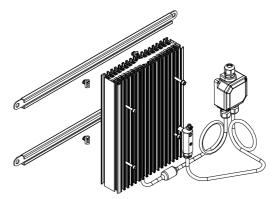

Wiring Diagramme 8

8.1 **MEGATHERM TS**

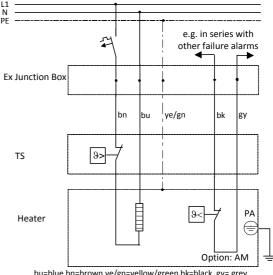

bu=blue bn=brown ye/gn=yellow/green bk=black gy= grey

8.2 **MEGATHERM TS40 with TAE**

