

Data Sheet

Techingenium

Distribuidores autorizados para Uruguay Venta - Ingeniería - Instalación - Mantenimiento Francisco Soca 1531 Telefono: +598 2 707 48 01 Montevideo Uruguay Mail: info@techingenium.com.uy www.techingenium.com.uy



MAIN CHARACTERISTICS

- Up to two simultaneous digital measurements. Turbidity \ Suspended Solids \ pH \ diff. pH \ ORP \ diff. ORP \ Oxygen.
- Measuring of Temperature using the PT100/PT1000 probe
- Programming key pad with 5 keys
- "CAL" Function Key to direct access to the calibration menu
- "GRAPH" Function Key to direct access to the graphs of measure
- "USB" Function Key for data download on USB support
- "MODE" Function Key for self-recognition probes
- LCD Graphic display 128x128 with background illumination
- Internal Data Logger (flash 4 Mbit) with the possibility of graphic and table visualisation of measurement trends
- PID adjustment
- Serial outlet RS485 MOD BUS RTU
- Data download on USB support
- 3 Programmable Analogical Outlets (with two equal measures the 3rd output can be set as average)
- 4 Relay Outlets for intervention thresholds (2 for each measurement)
- 1 Relay Outlet for Instrument Anomaly Alarm
- 1 Relay Outlet for Probe Washing or Temperature Set Point
- 1 Digital Entrance for disabling of doses




> Main hardware characteristics of the electronic device

The hardware structure of this periphery is based on the adoption of extremely new CPU CMOS with 16 bits developed specifically for the execution of the so-called "embedded" applications.

The card uses an EEPROM to store the Set-up data and flash memories for storage of the archives of historical data and LOG files of events.

The Card has 1 RS485 gate (opto-isolated) for local networks used for connections with local communication devices (configuration computer, terminals and remote controls etc). The card integrates a Real Time Clock (clock with date) that allows the software to storage figures in a chronological order.

> The device has been designed to be fitted onto a panel, and is built with IP66 protection panel.

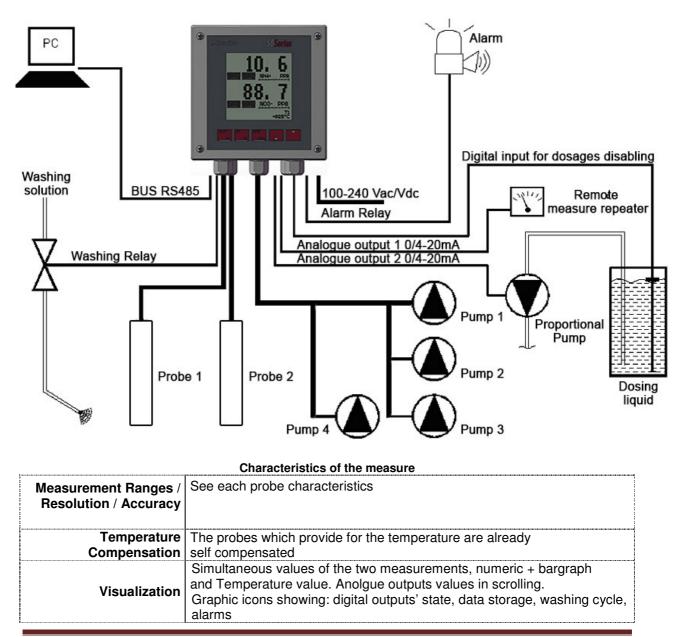

> Controller maximum capability





	Software features and functions
	Internal Flash 4Mbit Memory (near to 16000 records).
	Records interval: 01:00 ÷ 99:99 min
Data storage	Type: Circular (F.I.F.O.) or Filling
	Possibility of visualization of the stored data in tabular and graphic form,
	with indication of max, min and average values of the selected period.
PID Regulation	Zoom function
	Functions: P – PI – PID. Activated on the analogue or the digital output.
5	Proportional range: 0 ÷ 500%
	Time of integral: 0:00 ÷ 5:00 min Time of derivative: 0:00 ÷ 5:00 min
3 Analogue Outputs	Output 1 programmable for the first measurement or PID regulation
	Output 2 programmable for the second measurement or PID regulation
	Output 3 programmable for the first or the second measurement or
	temperature or measurament average (in case of the same kind of
	measurement)
	Output limits freely programmable between measuring ranges.
2 Active Digital Outputs	Set Point ON – OFF : working range setting (Hysteresys / direction) and
For each measurement	pause/working time setting: 000 ÷ 999 Seconds
	PID Regulation (only on Set point 1): Pulse Frequency or PWM
Alarm digital output	Reporting: Instrumental anomalies, minimum, maximum, set point's delay,
	permanence time (live check)
	Delay time: 00:00 ÷ 59:99mm:ss at minimum steps of 15sec
· · ·	Permanence time: 00:00 ÷ 99:99 hh:mm
	Set Point disableing (in case of alarm): Enable / Disable
Digital output for	Programming of the time leg
electrode washing or	Frequency: 00:00 ÷ 24:00 hh:mm minimum time leg: 15 min
temperature set point	During the washing phase, all digital and analogue outputs are freezed
Digital input	To disable dosages or activate washing cycle
RS485 Serial output	For set-up and real-time data acquisition from remote or for stored data
	download (using a dedicate-SW) .
	MODBUS RTU communication protocol
	Possibility to simulate all the analogue and digital outputs using the
Manual controls	keyboard
	Hardware Features
Visualization	LCD graphic backlit Display STN 128x128
	Area visibile: 70x70 Versione da Parete
	5 bubble-Keys keyboard
Data Logger	Flash 4Mbit Memory (near to 16000 records).
Analogue Outputs	0 / 4.00 ÷ 20.00 mA
	Galvanic separation: 1KV Optoisolator
	Maximum load 500 Ohm
	Second Alarm output: NAMUR 2.4 mA (with 4/20mA Range)
	Switching Relays
Digital Outputs	
	Usable as NO contact
Digital Input	Active and already supplied
g	Possibility to link with a 3 wires - inductive sensor
Serial Output	RS485 with 1200÷38400 Baud Rate programmable speed
	MOD BOS RTO Protocol
Operating conditions	Operating temperature 0÷50 ℃
	Humidity 10-95% (non-condensing)
	Power supply 90÷260Vac/dc 50-60Hz – (Optional 24Vac/dc)
Power Supply/	- Transformer isolation4KV
Electrical protections	– Absorbing average < 6W
	– Electrical Protection: EMI / RFI CEI-EN55011 – 05/99
	 According to UL, not connect to relay outputs a voltage exceeding 115V




Data Sheet

> Mechanical dimensions

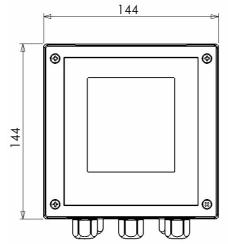

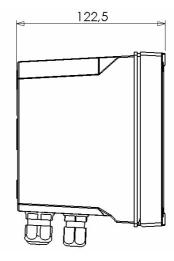

Mechanical Dimensions	50XX Wall IP66
Dimensions (L x H x P)	144x144x122,5mm
Mounting thickness	122,5mm
Material	Grey ABS RAL 7045
Mounting	Wall
Weight	1 Kg
Front Panel	UV resistant Polycarbonate

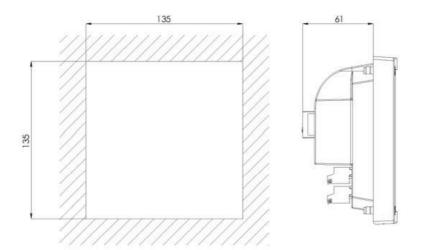


Mechanical Dimensions	50XX Panel 144x144
Dimensions (L x H x P)	144x144x86,5mm
Mounting thickness	61mm
Material	Grey ABS RAL 7045
Mounting	Panel
Weight	0,7 Kg
Front Panel	UV resistant Polycarbonate




Data Sheet

> Controls, indicators and connections

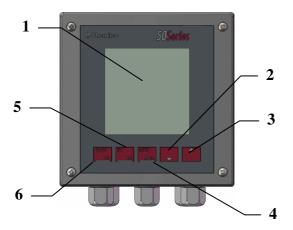

Front panel, wall mounting version


- 1. LCD Display
- 2. DOWN
- UP
 ENTER
- 4. ENTER 5. ESC
- 6. GRAPH-USB

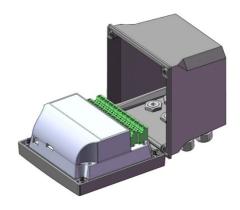

Access to terminal box

> Modbus-RTU serial interface

- Real-time data communication
- Download of the stored data on a PC via SW or directly on an USB support

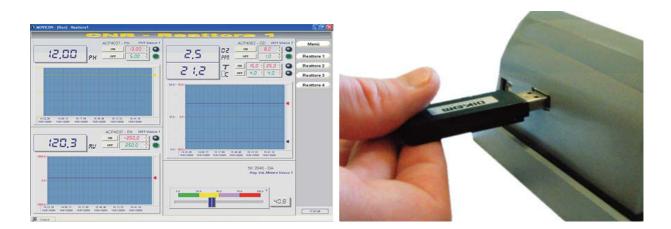



Data Sheet

> Plug & play sensors



9700830067 S423 C OPT Oxygen optical probe



9700831067 S423 C OPT PVC Oxygen optical probe



9700620063 S461 S Suspended solids probe



9700590063 S461 T Infrared turbidity sensor



9700720097 – 9700730097 S401-S406 Diff pH-ORP differential electrodes



9700770097 – 9700780097 S401-S406 Dig pH-ORP digital electrodes

CHEMITEC s.r.l. Via Isaac Newton 28 - 50018 Scandicci (FI) Tel. +39 055 7576801 fax +39 055 756697 Web site: www.chemitec.it

E-mail: sales@chemitec.it